

# Calibration Report



<b>Camera:</b>	<b>UltraCam D, S/N UCD-SU-1-0029</b>
<b>Manufacturer:</b>	<b>Microsoft Photogrammetry, A-8010 Graz, Austria</b>
<b>Date of Calibration:</b>	<b>Jun-27-2007</b>
<b>Date of Report:</b>	<b>Jun-29-2007</b>
<b>Camera Revision:</b>	<b>5.0</b>
<b>Revision of Report:</b>	<b>5.0</b>

# Calibration Report

## Geometric Calibration



<b>Camera:</b>	<b>UltraCam D, S/N UCD-SU-1-0029</b>
<b>Manufacturer:</b>	<b>Microsoft Photogrammetry, A-8010 Graz, Austria</b>
<b>Panchromatic Camera:</b>	<b>ck = 105.200mm</b>
<b>Multispectral Camera:</b>	<b>ck = 105.200mm</b>
<b>Date of Calibration:</b>	<b>Jun-27-2007</b>
<b>Date of Report:</b>	<b>Jun-29-2007</b>
<b>Camera Revision:</b>	<b>5.0</b>
<b>Revision of Report:</b>	<b>5.0</b>

## Panchromatic Camera

### Large Format Panchromatic Output Image


<b>Image Format</b>	long track	67.5mm	7500 pixel
	cross track	103.5mm	11500 pixel
<b>Image Extent</b>		(-33.75, -51.75)mm	(33.75, 51.75)mm
<b>Pixel Size</b>		9.000μm*9.000μm	
<b>Focal Length</b>	ck	105.200mm	± 0.002mm
<b>Principal Point</b>	X_ppa	-0.180 mm	± 0.002mm
<b>(Level 2)</b>	Y_ppa	0.000 mm	± 0.002mm
<b>Lens Distortion</b>	Remaining Distortion less than 0.002mm		

## Multispectral Camera

### Medium Format Multispectral Output Image (Upscaled to panchromatic image format)

<b>Image Format</b>	long track	67.5mm	2400 pixel
	cross track	103.5mm	3680 pixel
<b>Image Extent</b>		(-33.75, -51.75)mm	(33.75, 51.75)mm
<b>Pixel Size</b>		28.125μm*28.125μm	
<b>Focal Length</b>	ck	105.200mm	
<b>Principal Point</b>	X_ppa	-0.180 mm	± 0.002mm
<b>(Level 2)</b>	Y_ppa	0.000 mm	± 0.002mm
<b>Lens Distortion</b>	Remaining Distortion less than 0.002mm		

## Full Pan Image, Residual Error Diagram

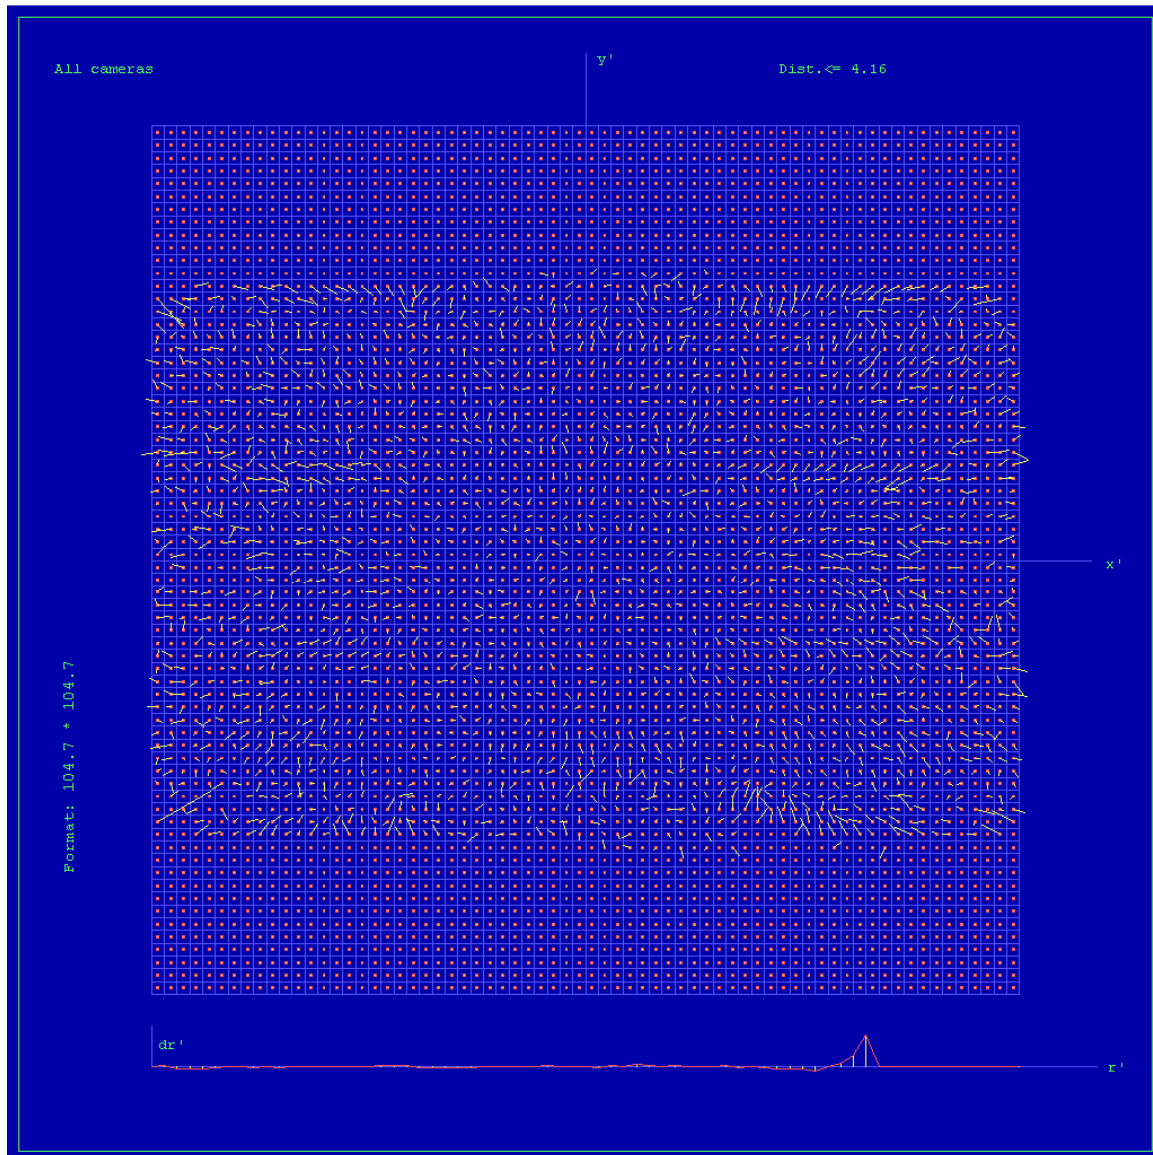

**Residual Error (RMS):**                      **0.53  $\mu\text{m}$**

### 1) Calibration Method:

Number of point measurements for the panchromatic camera :	17477
Number of point measurements for the multispectral camera :	64864

2) Level 2 Image Coordinate System:

pan	11500 pixel by 7500 pixel
MS	3680 pixel by 2400 pixel


Diagram illustrating a grid structure with dimensions and coordinate system:

- Columns: 1 to 11,500
- Rows: 1 to 7,500
- Grid dimensions: 103.5 mm (width) and 67.5 mm (height)
- Coordinate system: +y (vertical), +X (horizontal)
- Flight Direction: Indicated by a downward arrow.
- Example values:
  - PPA<sub>x</sub> = - 0.123 mm
  - PPA<sub>y</sub> = + 0.345 mm


( 5 of 13 )

3) Level 3 Image Coordinate System:  
(after rotation of 270° CW)

pan 7500 pixel by 11500 pixel  
MS 2400 pixel by 3680 pixel

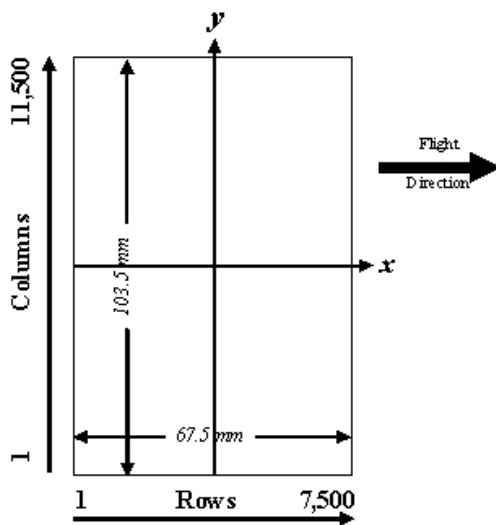

Panchromatic Image Format

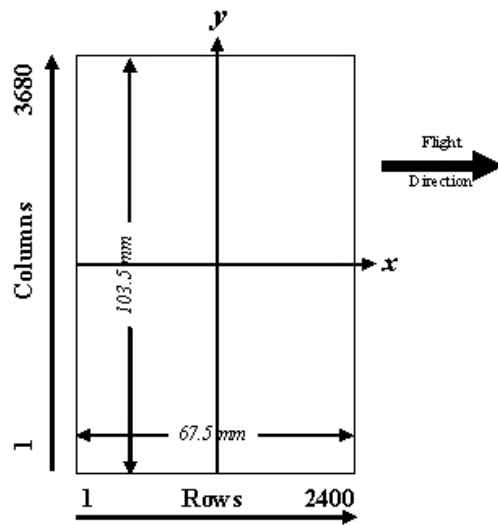

Multispectral Image Format


#### 4) Position of Principal Point in Level 3 Image

The position of the principal point in the level 3 image depends on the “rotation” setting used in the OPC during the pan-sharpening step. The exact position relative to the image center is given in the table below as a function of the rotation setting used in the OPC. The coordinates are specified for clockwise (CW) rotation in steps of 90 degrees, according to the principal point coordinate given on page 3 for high- and low resolution images.


Image Format	Clockwise Rotation (Degree)	PPA	
		X	Y
Level 2	-	-0.180	0.000
Level 3	0	-0.180	0.000
Level 3	90	0.000	0.180
Level 3	180	0.180	0.000
Level 3	270	0.000	-0.180

The coordinates in the figure below are only example values to illustrate the effect of image rotation on the principal point position, and do **not** correspond to the camera described in this report.


Lvl3, Rotation 0 deg clockwise

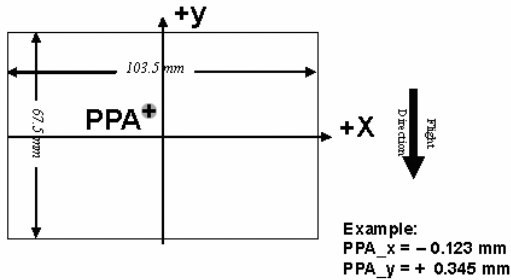


Lvl3, Rotation 90 deg clockwise

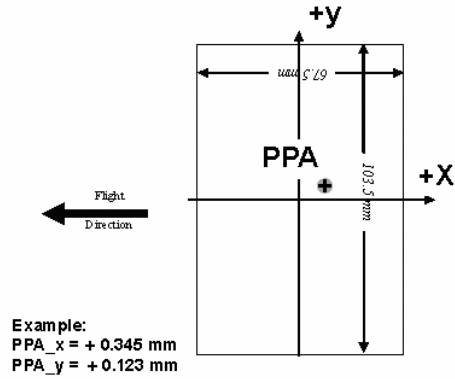

Lvl3, Rotation 270 deg clockwise

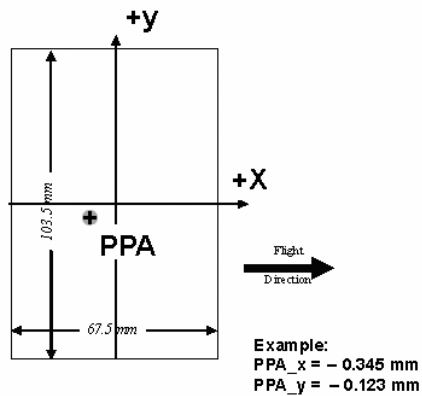

Lvl3, Rotation 180 deg clockwise

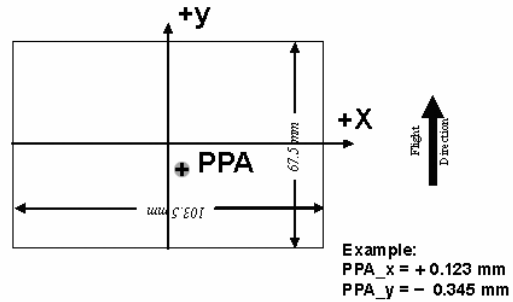


## Lens Resolving Power

The following curves show the development of the modulation transfer function across different image heights of the panchromatic cones.


The curves are given for the meridional (tangential) and sagittal (radial) component of signals at frequencies of 10, 20 and 40 line pairs per millimeter.

As the MTF is a function of the specific aperture size used, one set of curves is given for each aperture size.

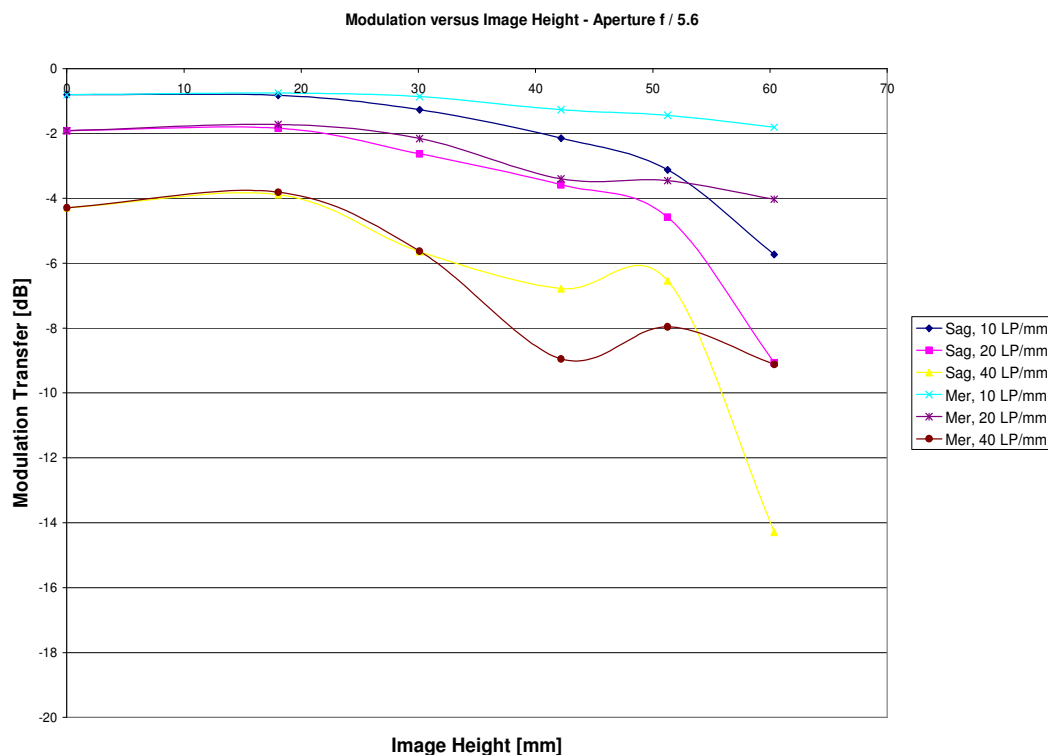





Modulation versus Image Height - Aperture f / 8

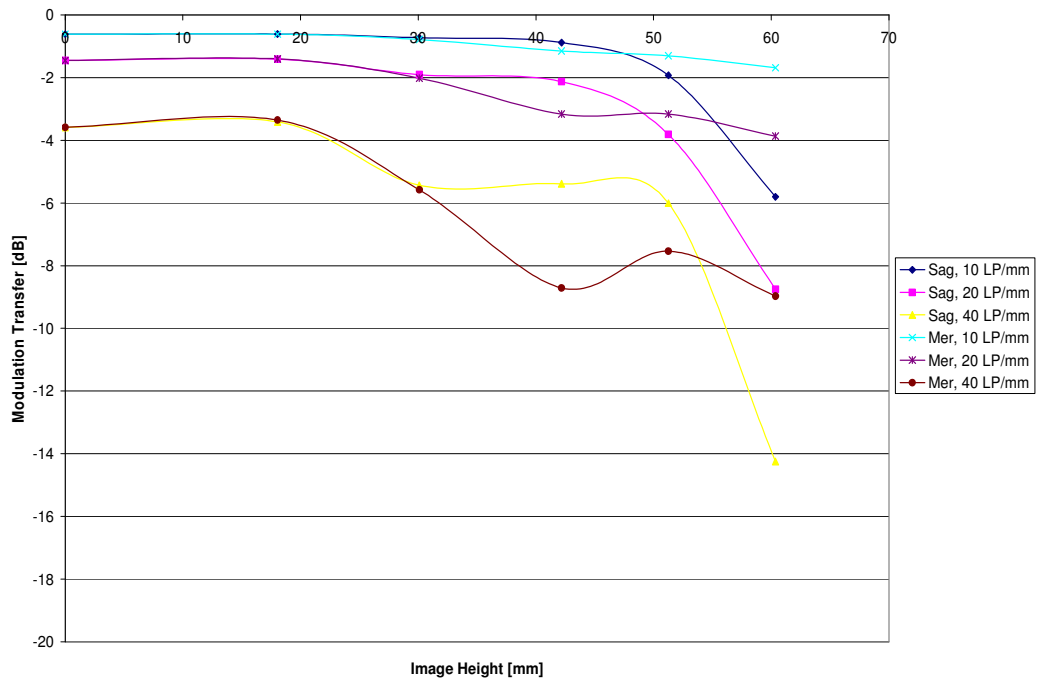


Modulation versus Image Height - Aperture f / 11

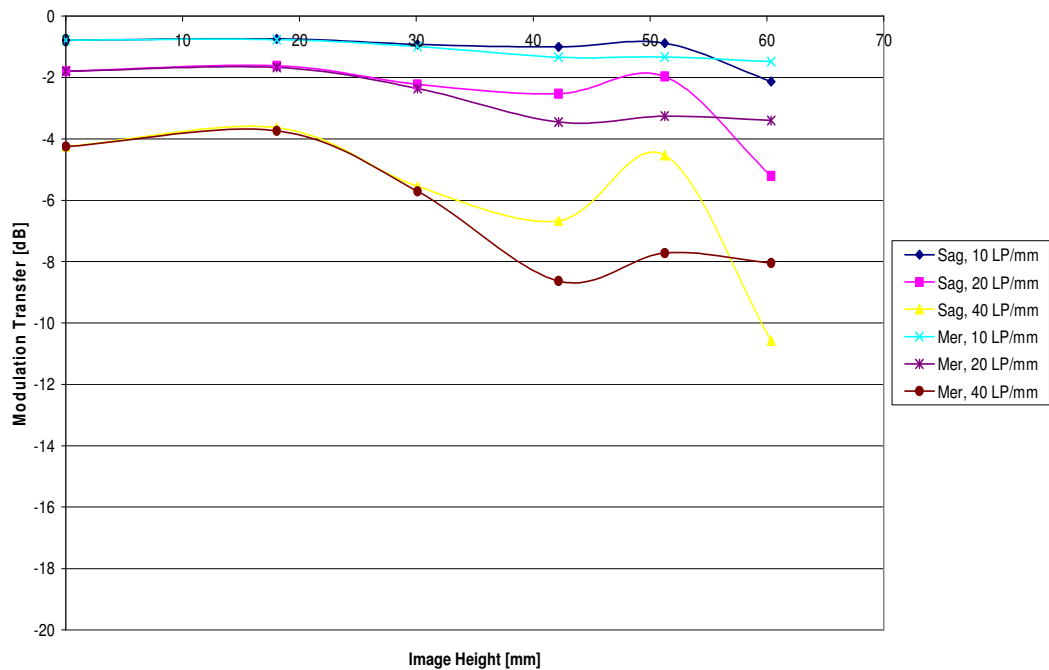

Modulation versus Image Height - Aperture f / 16

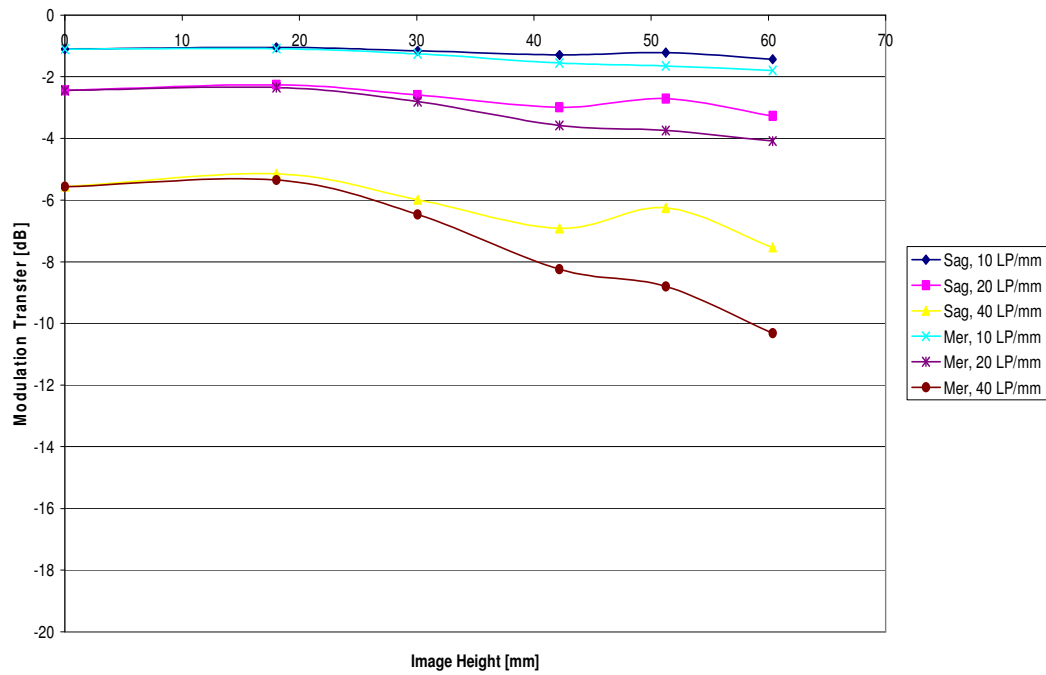

Modulation versus Image Height - Aperture f / 22

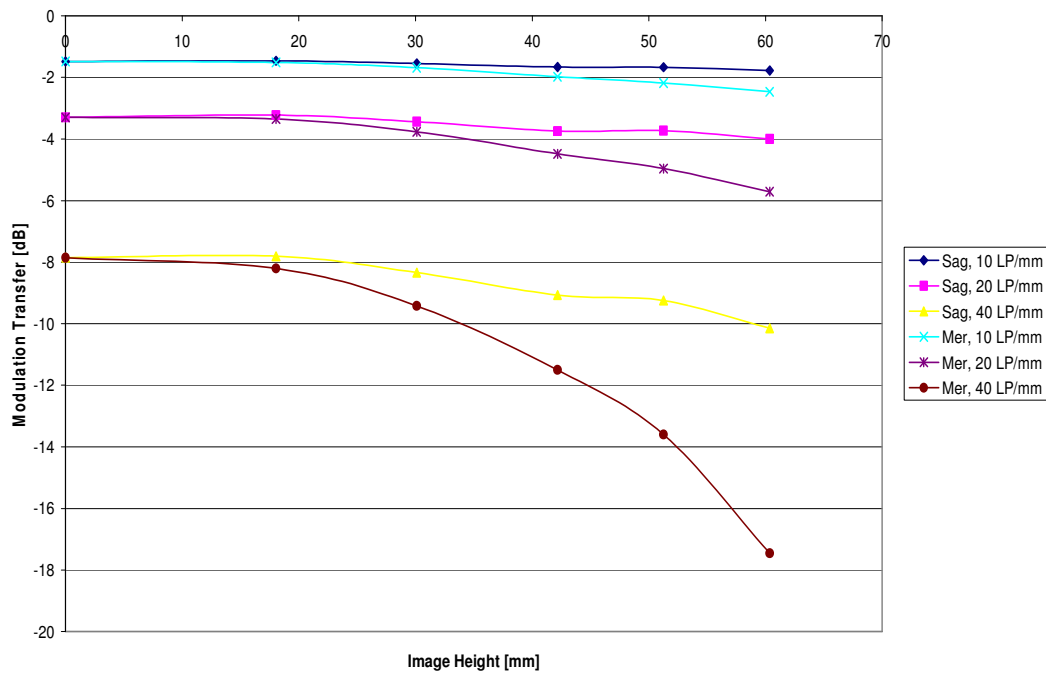

# Calibration Report

## Radiometric Calibration



<b>Camera:</b>	<b>UltraCam D, S/N UCD-SU-1-0029</b>
<b>Manufacturer:</b>	<b>Microsoft Photogrammetry, A-8010 Graz, Austria</b>
<b>Panchromatic Camera:</b>	<b>Apertures: f/5.6, f/8, f/11, f/16, f/22 (All Pan)</b>
<b>Multispectral Camera:</b>	<b>Apertures: f/4, f/5.6, f/8, f/11, f/16 (Red, Green) f/4, f/4, f/5.6, f/8, f/11 (Blue, NIR)</b>
<b>Date of Calibration:</b>	<b>Jun-27-2007</b>
<b>Date of Report:</b>	<b>Jun-29-2007</b>
<b>Camera Revision:</b>	<b>5.0</b>
<b>Revision of Report:</b>	<b>5.0</b>

**Explanations:****Calibration Method:**

The radiometric calibration is based on a series of 60 flat field images for each aperture size and sensor. The flat field is illuminated by two normal light lamps with known spectral illumination curves.

These images are used to calculate the specific sensitivity of each pixel to compensate local as well as global variations in sensitivity. Sensitivity tables are calculated for each sensor and aperture setting, and applied during post processing from level 0 to level 1.

Outlier Pixels that do not have a linear behavior as described in the CCD specifications are marked as defective during the calibration procedure. These pixels are not used or only partially used during post processing and the information is restored by interpolation between the neighborhood pixels surrounding the defective pixels.

Certain pixels that are named Qmax pixels due to the fact that they can only store and transfer charge up to a certain maximum amount are detected in an additional calibration step. These pixels are treated differently during post processing, since their behavior can affect not only single pixel values but whole columns.

# Calibration Report

## Summary



**Camera:** UltraCam D, S/N UCD-SU-1-0029

**Manufacturer:** Microsoft Photogrammetry, A-8010 Graz, Austria


**Date of Calibration:** Jun-27-2007  
**Date of Report:** Jun-29-2007  
**Camera Revision:** 5.0  
**Revision of Report:** 5.0

The following calibrations have been performed for the above mentioned digital aerial mapping camera:

- Geometric Calibration
- Verification of Lens Quality and Sensor Adjustment
- Radiometric Calibration
- Calibration of Defective Pixel Elements
- Shutter Calibration
- Sensor and Electronics Calibration

This equipment is operating fully within specification as defined by Vexcel Imaging GmbH.

  
Dr. Michael Gruber  
Chief Scientist, Photogrammetry  
Vexcel Imaging GmbH.

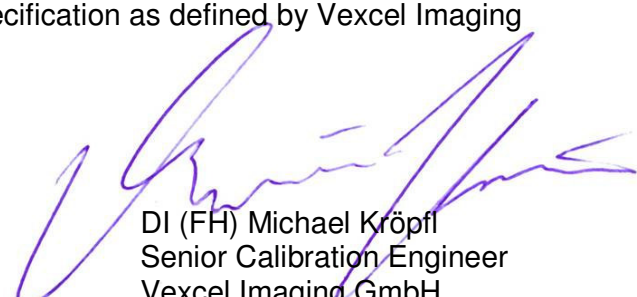  
DI (FH) Michael Kröpfl  
Senior Calibration Engineer  
Vexcel Imaging GmbH